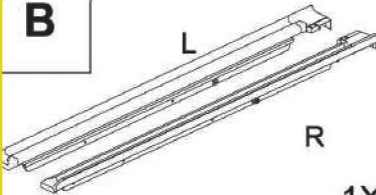
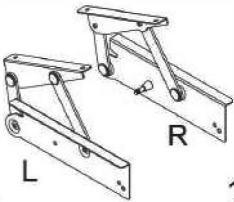


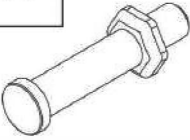
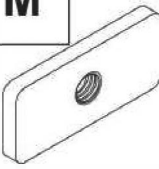
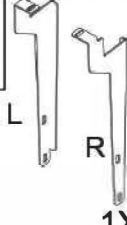
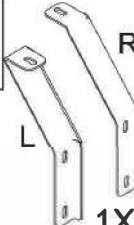
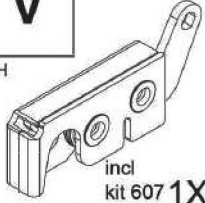
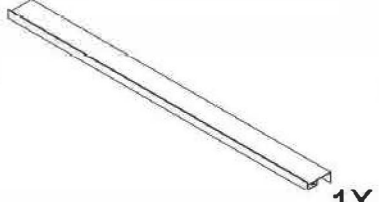
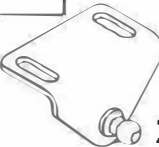




UpStoneEvolve


SAILPLANE LID INSTALLATION MANUAL FORD WILDTRAK DC 2022+ EVOS1450S

COVER1400S
KIT1400S-1RLBF
KIT1400S-2RLBF


A  1X	B  1X	C  1X	D  2X		
E  2X	F M8x60 Inox A4  4X	G  M8 Stainless Steel Spring Washer 10X	H M8 x16 Stainless Steel  24X	I  incl kit 607 2X	J M8 Nylock Stainless Steel  incl kit 607 6X
K M8 Stainless Steel Spring Washer  incl kit 607 2X	L  2X	M  2X	N  1X	O  1X	P M8x18  incl kit 607 12X
Q M6x13mm Zinc  incl kit 607 12X	R M6x10mm  incl kit 607 8X	S M8 Ø20x10mm SPACER  4X	T  2X	U M8 Nylock Inox  8X	AK M6x20mm  4X
V RH  incl kit 607 1X	W LH  incl kit 607 1X	X M5 Cable Bolt, Washer & Dome Nut  incl kit 607 2X	Y  incl kit 607 2X	AA  2X	Q M6x13mm Inox  4X
AB  1X	AC  2X	AD M8 SS SPACER  2X	AE M5 Nylock Inox  4X	AF M5x18 Inox A4  4X	AG M8x20 Inox A4  4X
AH M8 x 26 COACH BOLT  6X	AI 10x10mm 	R M6x10mm  8X	Note: If at any stage of installation you find your Aluminium Tonneau Cover to be an unacceptable fit please contact the manufacturer before continuing. Tools Required:  BLACK SILICONE  3 + 5mm Hex Key  14mm Wrench 		

Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	30-06-2023	1 of 8


1

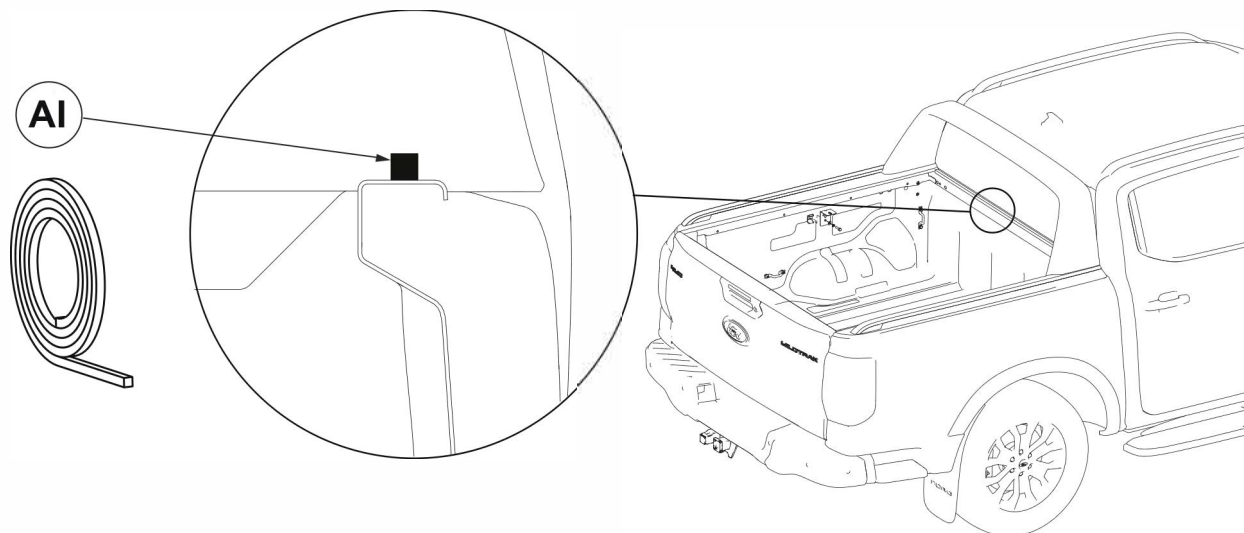


2

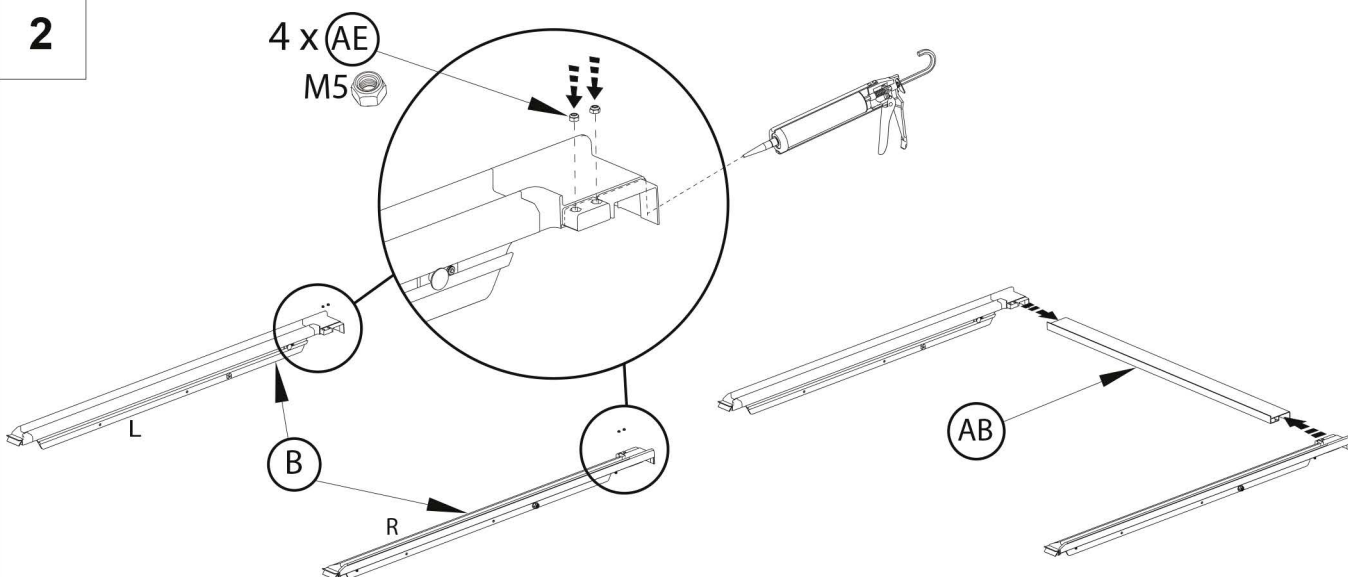


3

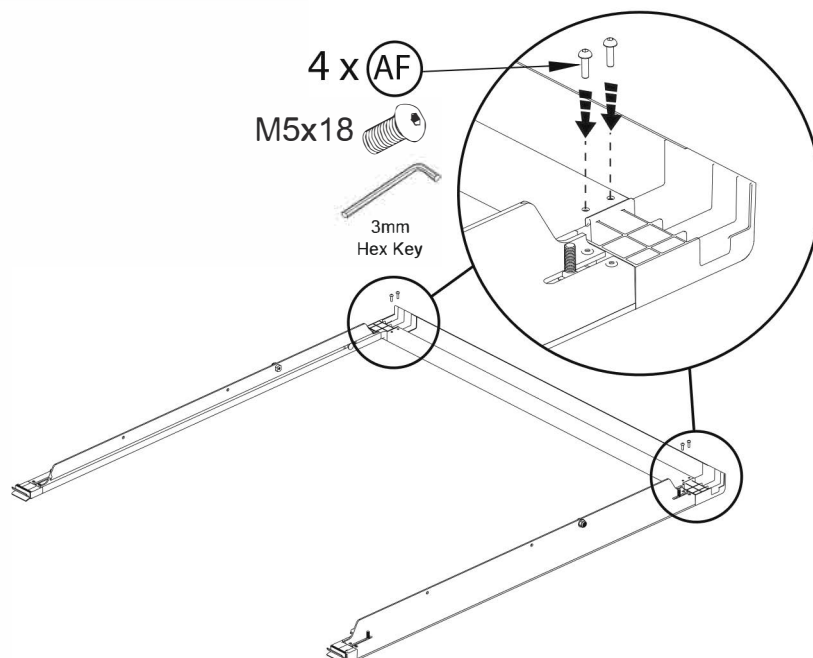


4

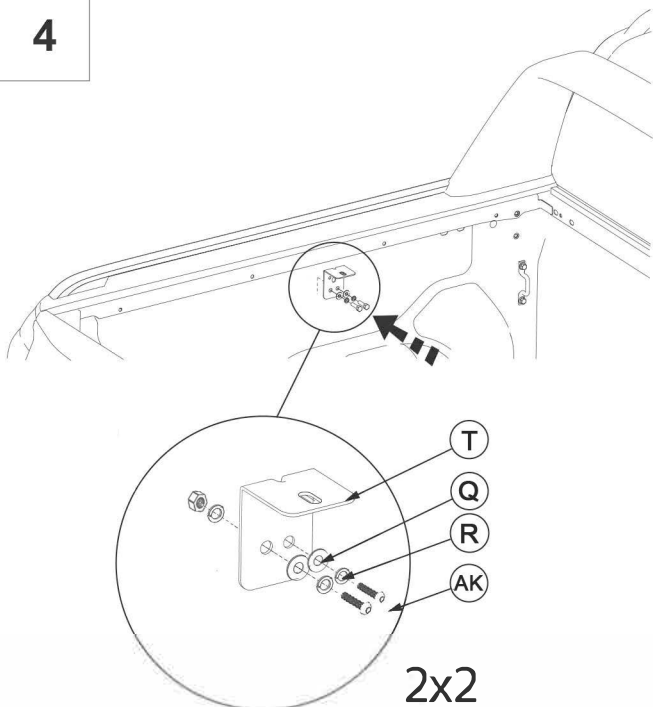


5

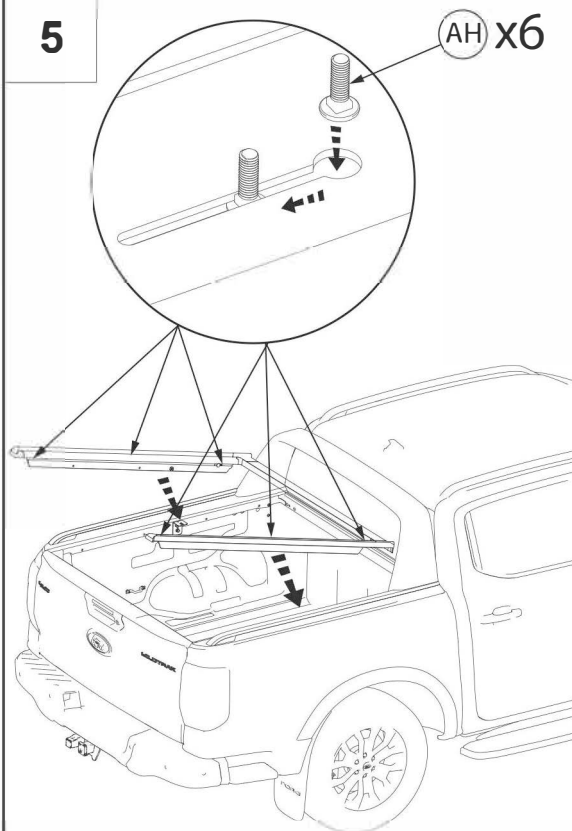


6

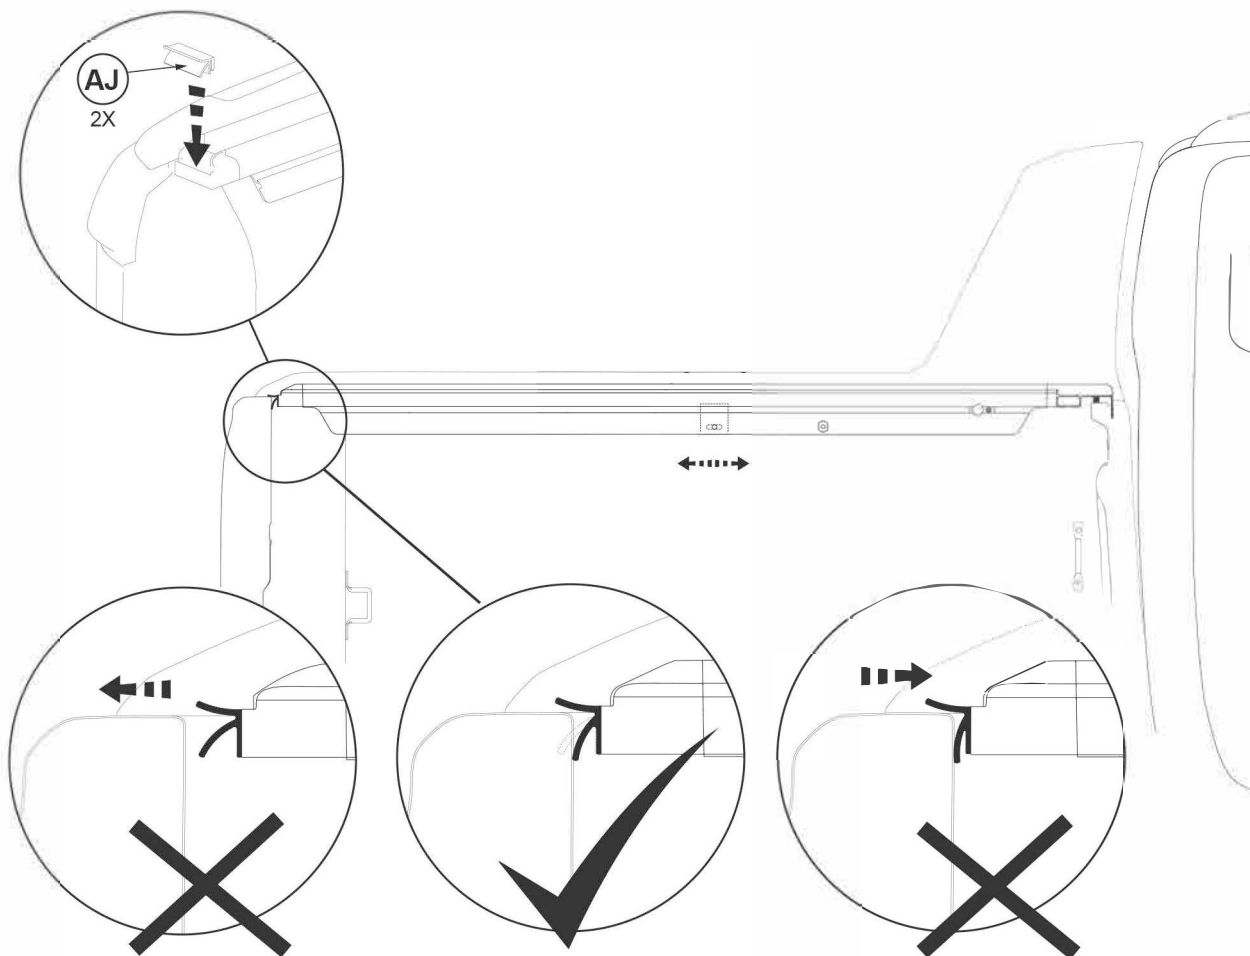


7

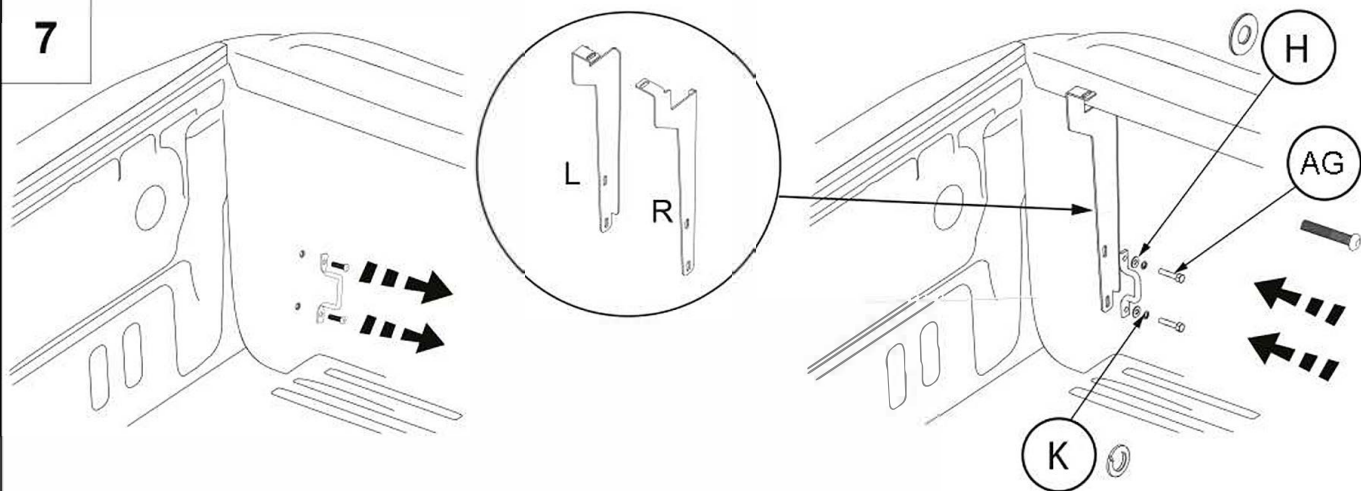


8

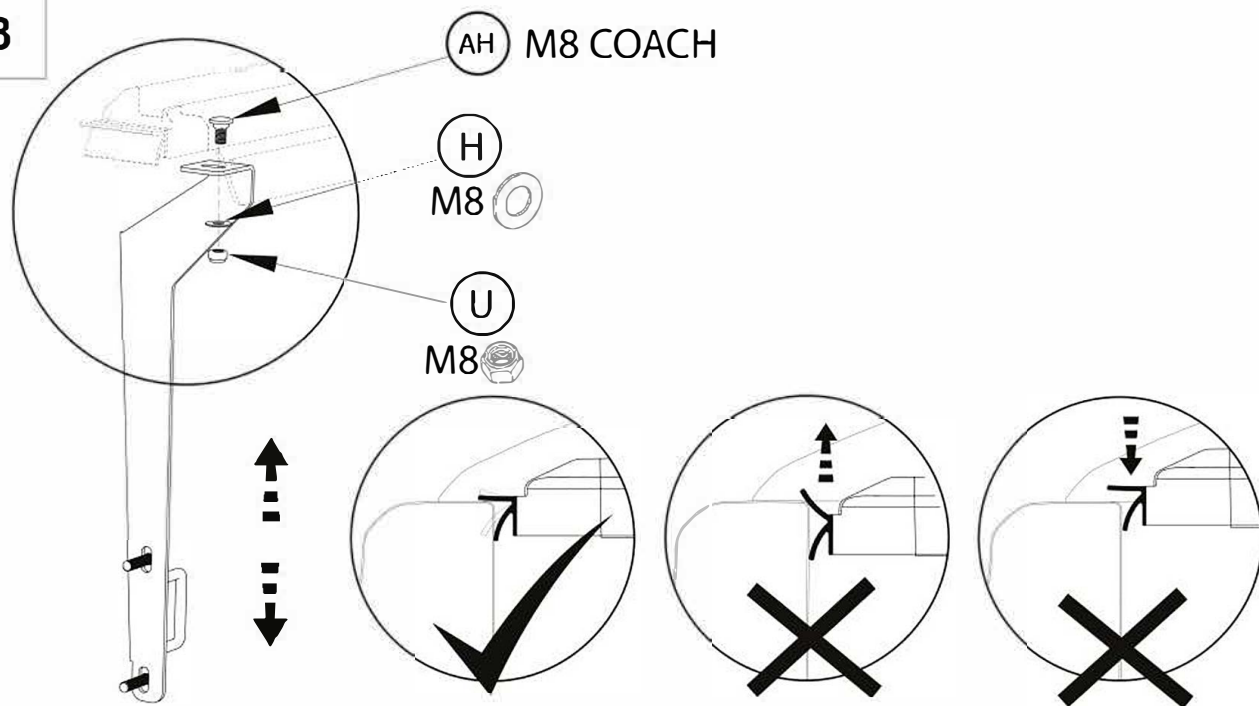


9

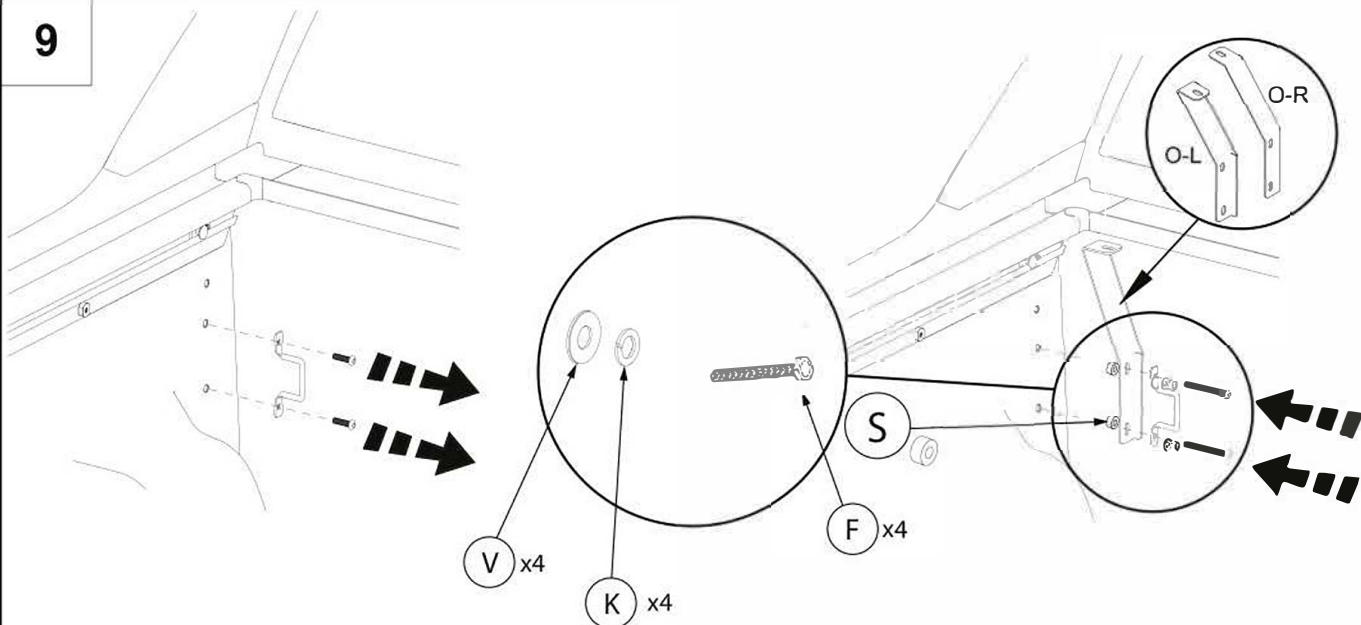


10

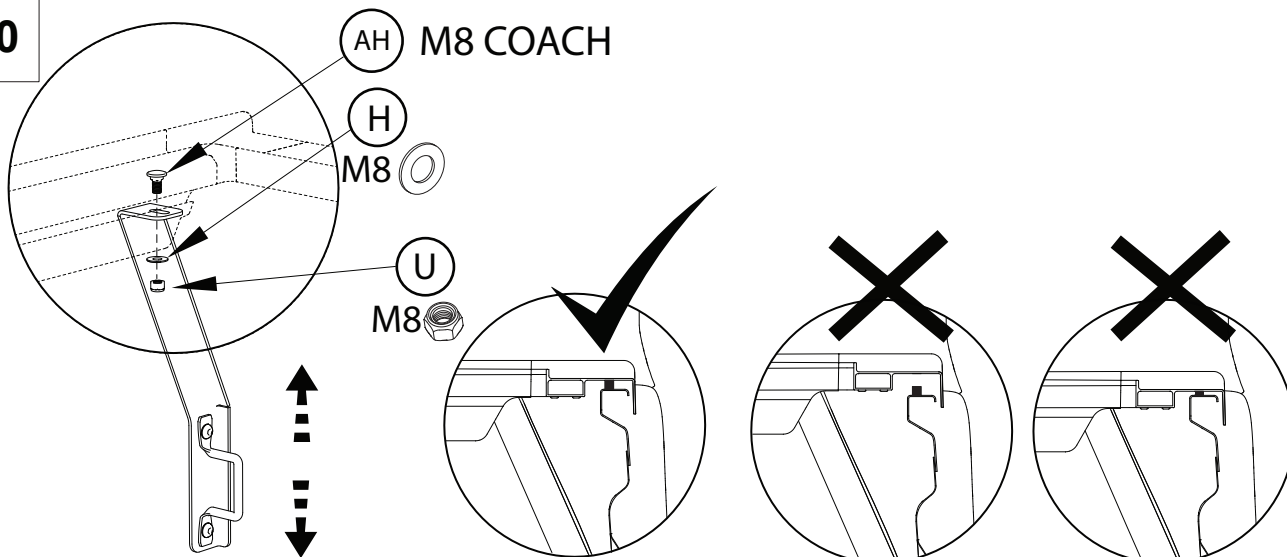

11

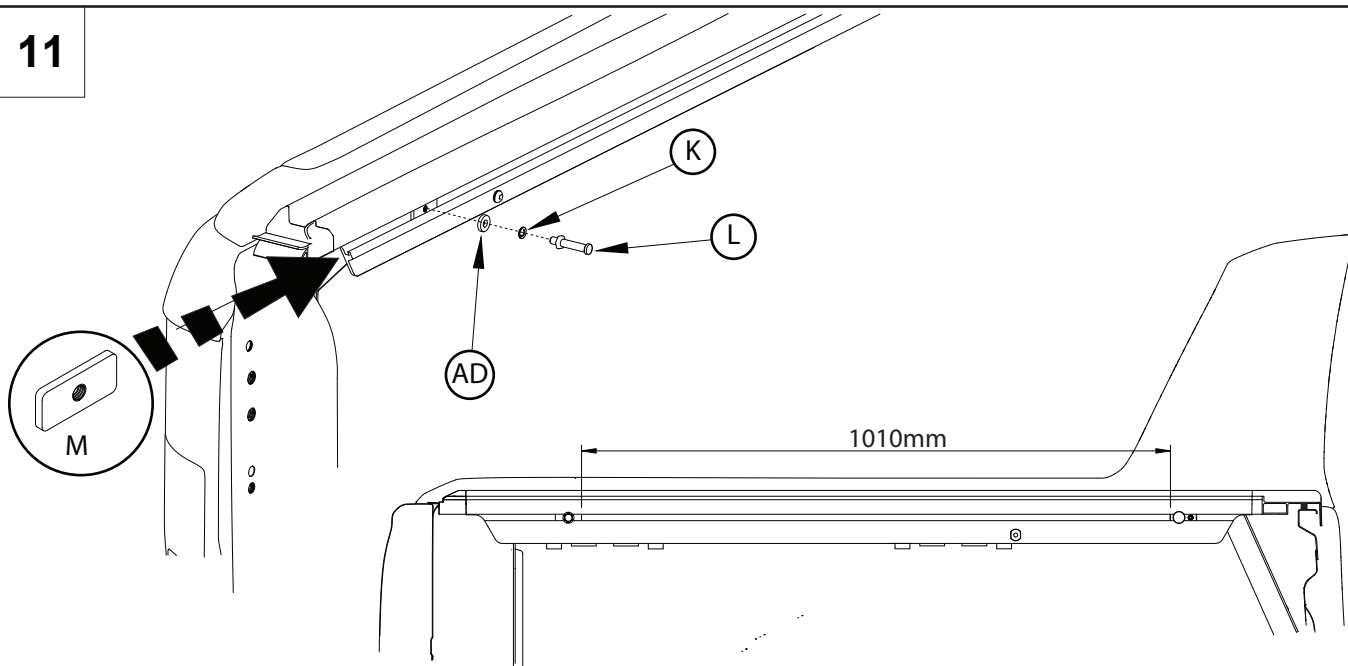


12

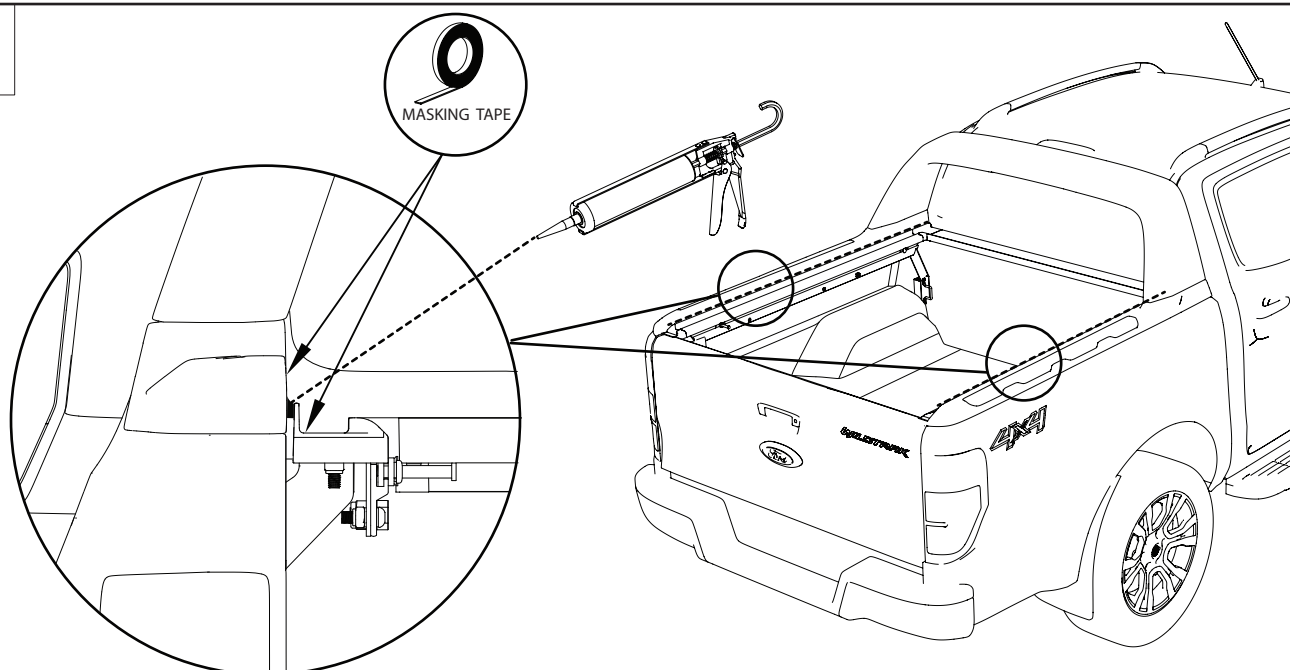


Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	30-06-2023	5 of 8


13

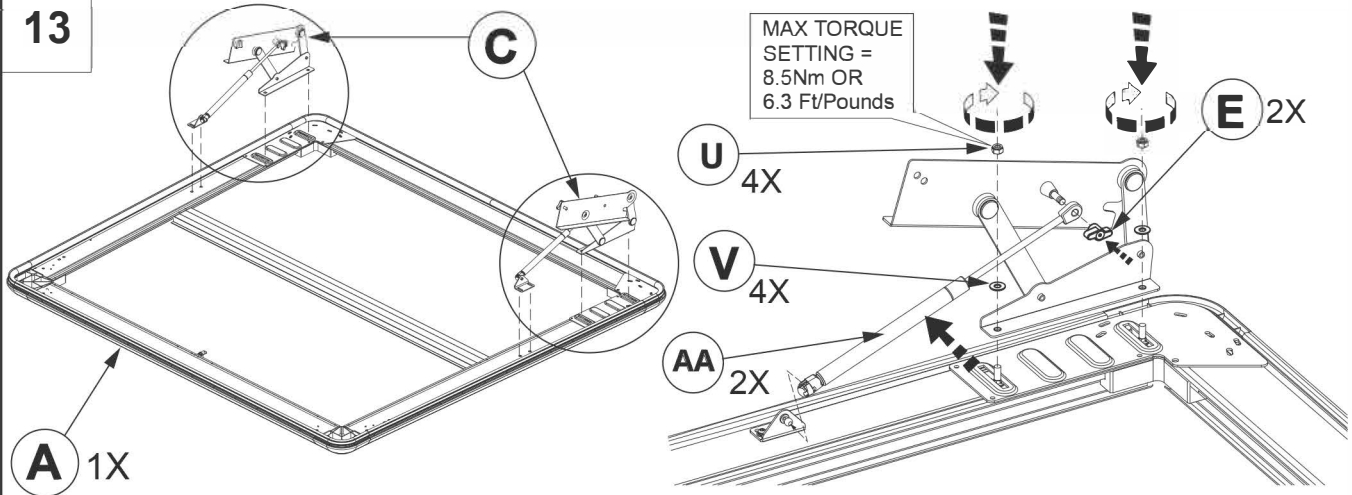


Vehicle Model	Π	Θ
	mm	mm
Ford Ranger Wildtrak DC 2011+	25.5	25.5

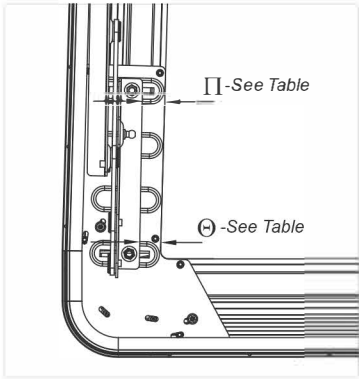



14

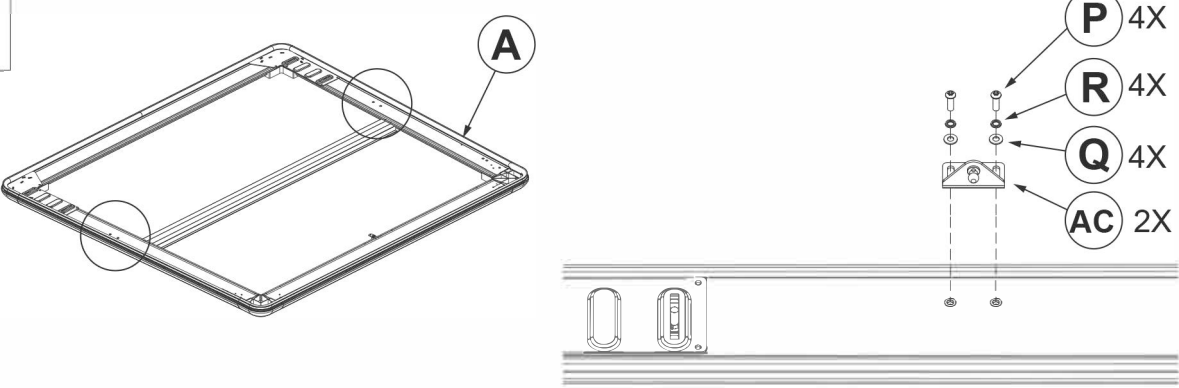



15

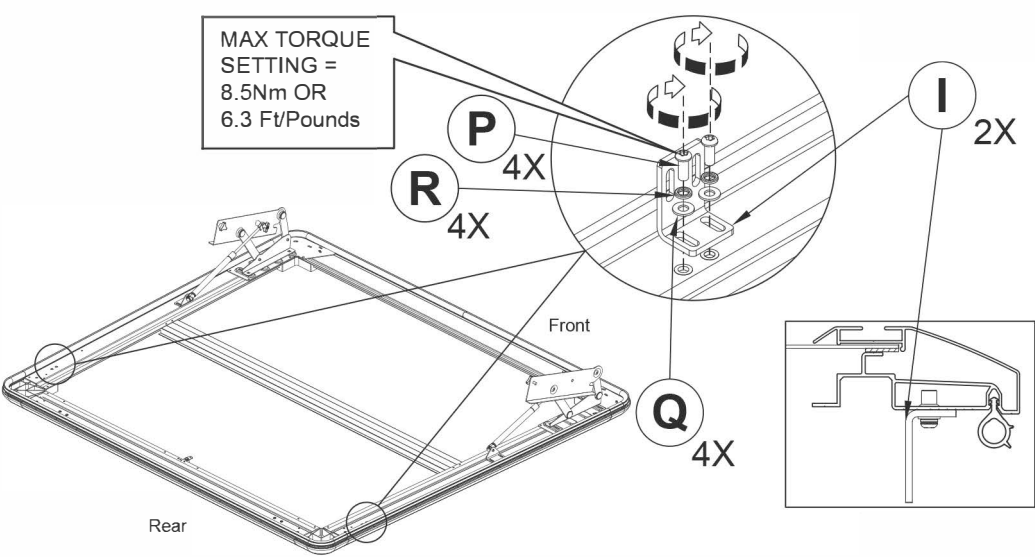



16

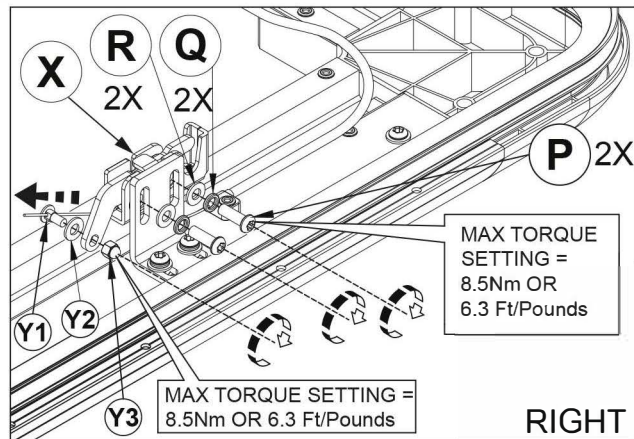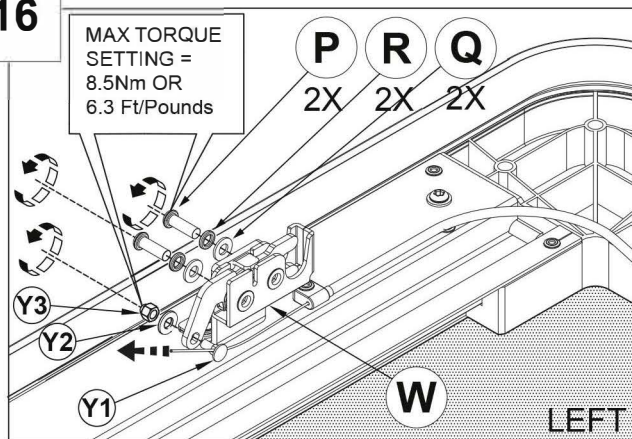


17

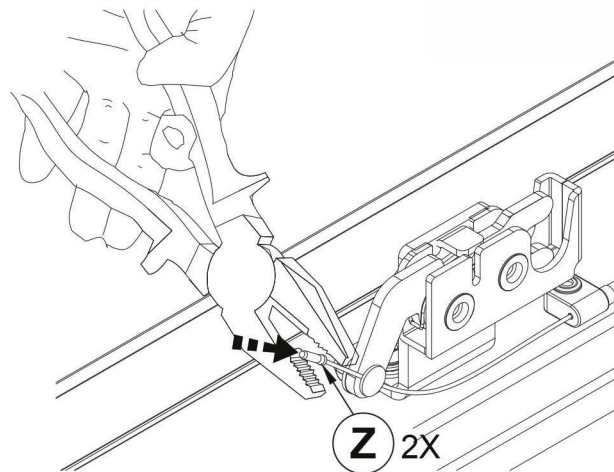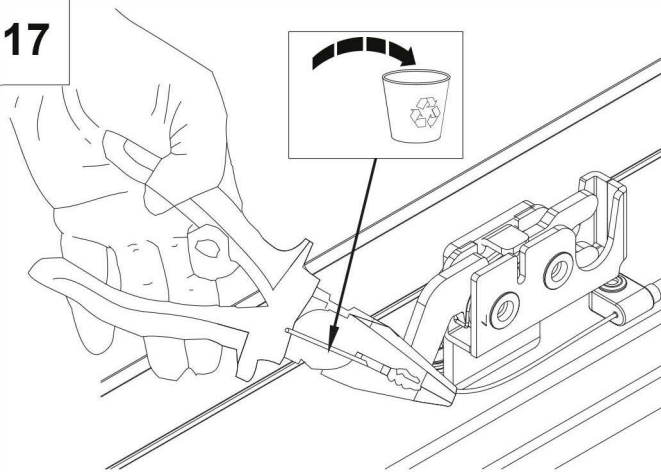




18

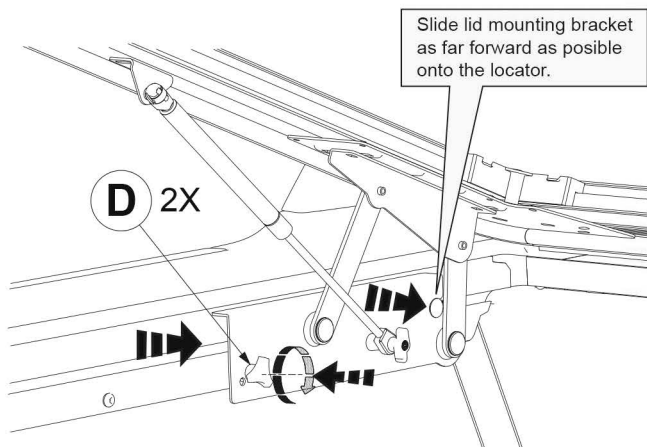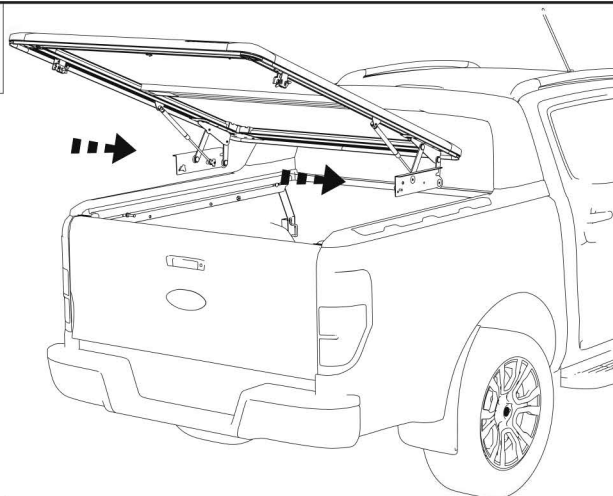

19

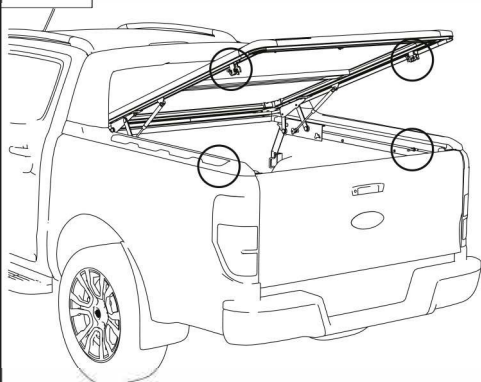

MAX TORQUE SETTING = 8.5Nm OR 6.3 Ft/Pounds

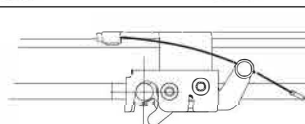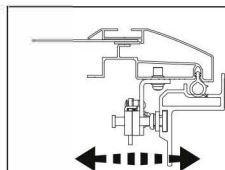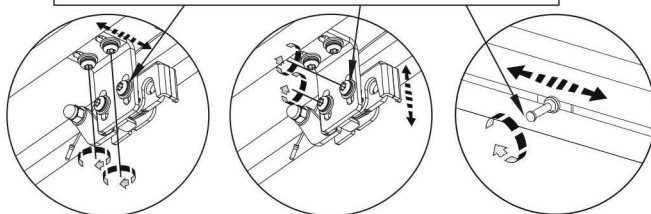

Adjust latch bracket, latch height and pin location to align pin with centre of latch. Adjust cable tension to achieve correct latching. **IMPORTANT!** : Ensure seal contacts vehicle in all areas

Fitting Kit Number

EVOS1400S

Product

UpStone Sailplane Lid

Revision

1


Date

30-06-2023





Page

7 of 8

20

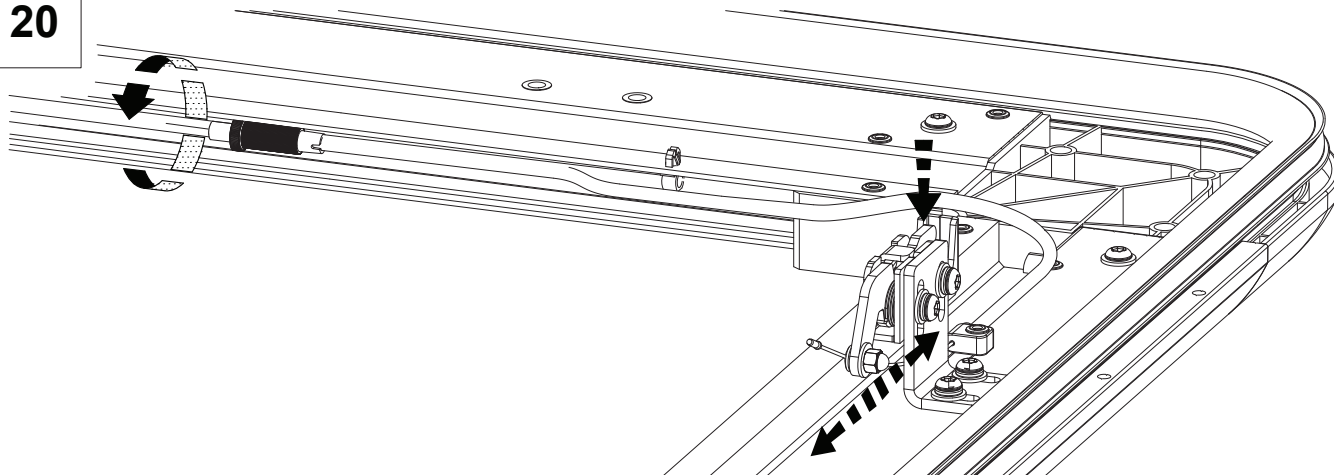

21

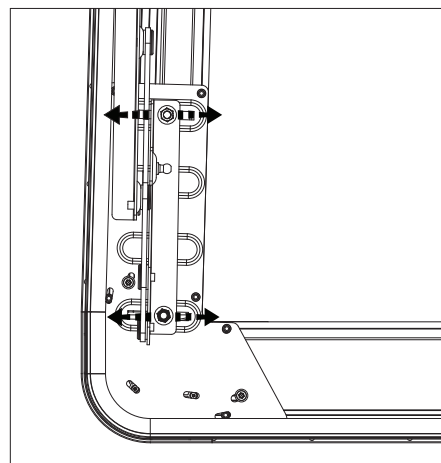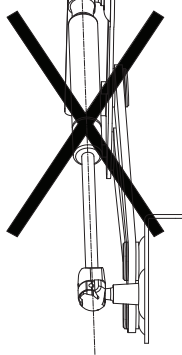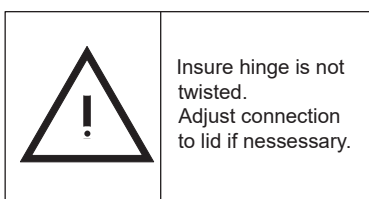

After installation carefully and thoroughly clean all debris from the inside of the cargo box.
Retain these instructions for future reference



CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

Info@upstone.fr

Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	30-06-2023	8 of 8